

- Adding LightSpeed to your Amazon Device
- Channel Surfing
- Channel Numbers
- Progress Bar
- Program Search
- Restart TV
- Live TV
- Quick Guide
- On-Screen Guide
- Recording Programs
- Watching Recordings
- Manage Recordings
- Series Rules
- Adding a New Device



amazon fireTV USAGE GUIDE

 
Use this guide for detailed information on using our Streaming TV Service with an Amazon Fire Stick.

Adding LightSpeed to your Amazon Fire TV device




To add the LightSpeed app to your Amazon Fire device, press the "HOME" button and navigate right to "Find" and then down to "Search". Select and click the "Get" button to download the app to your device. Once installation is completed, you will be prompted for a login and password. If you haven't received these, please contact the LightSpeed office. After entering the Login and Password press "Save" and then you are ready to stream.

Navigating the FireStick and App Content

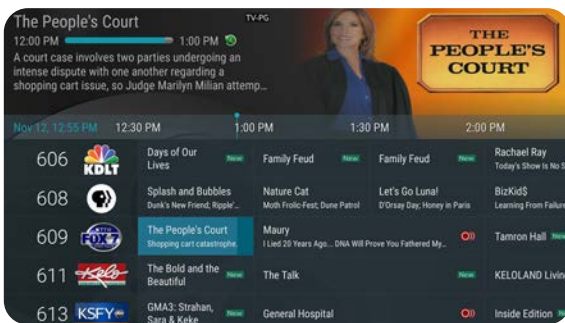

Pressing left, right, up or down on the remote circle will highlight specific items. Pressing in the center of the remote circle will open a highlighted item. To return to the Home Screen, press the "Home" button. Press the Back button to move back to the previous screen. To stream television, highlight and expand the LightSpeed application and press the center circle of the remote. After opening your on-screen program guide, press up or down on the remote to any program highlighted in Blue and press the play/pause button to view a currently airing program.

 Channel Surfing / Channel Numbers

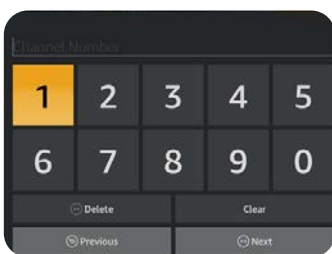

While watching a currently airing program, press the top of the remote circle to view the next higher numbered channel. Press the bottom of the remote circle to view the next lower numbered channel. To enter the channel number, press and hold the center of your remote ring to open a screen that allows a specific channel number and then select "Next" to move to that channel number in the Program Guide. *Note: This feature only works with the LightSpeed on-screen guide.

 
Fast Forward and Rewind Features



There may be times when you want to go back and see that exciting play in the game or fast forward through commercials - don't tell the advertisers. To use this feature during an in-progress or recorded program, press the

Fast Forward button on your remote control to advance the program, and press rewind to go back. The Progress Bar lets you track your movement through a program, and the timer helps you see how far you are from the end of the program.

Program Search Feature

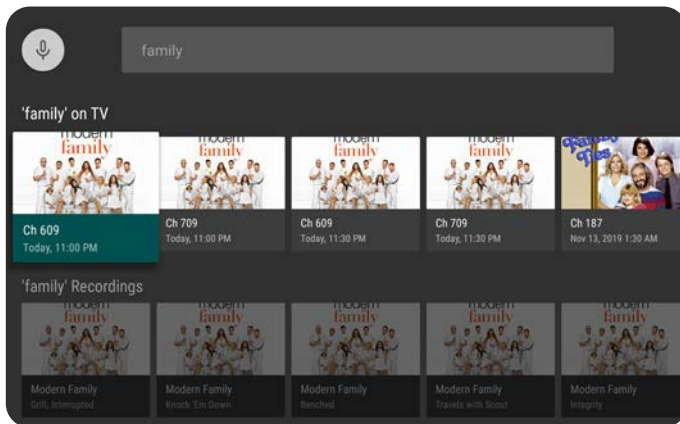


You can use the Search feature to find Live, Recorded, and Future programs. From the Program Guide, press the Back button to open the Tab Bar, scroll right to the Search Feature, press on the lower part of the remote ring, and then press the right side of the remote ring to open a typing pad. You can manually type in a program search by typing in letters of a program that you are searching for. To use voice search, press and hold the Microphone button while saying the name of the program you are looking for. The results will be more specific if you type in or pronounce more letters

in the name of the program. You can also use the search feature to find specific types of program, like a program with the name "Today" in the title. To view your search results, highlight Next on the keypad and press the center of your remote. The search results will show currently airing or upcoming programs in the top row. Highlight a program, press the center of your remote, and then select Watch to view the program or Record to add this program to your future recordings. The bottom row will show programs that have been recorded or future recordings. Highlight a recorded program you want to watch and press the center of the remote to watch the program. You can also select Delete if you want to remove the program from your recordings space.

Recording Your Programs

When you select Record, a screen will display that gives you the options for setting a Recording Series rule for the program. You can record only new episodes (Series-New Only), record all episodes of this program (Series-All), or a One-Time recording of this program. To further manage this recording, go to the Tab Bar and select the Recording options.

 Watching Your Recordings

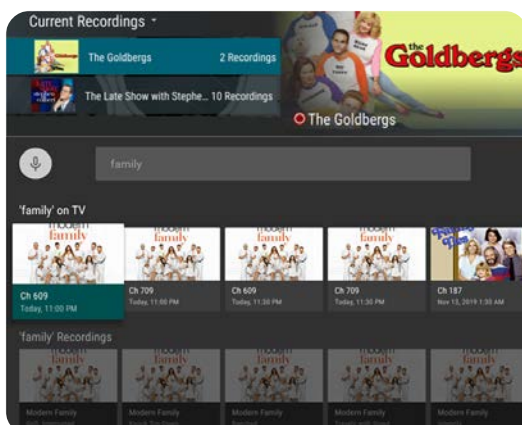

Recordings can be viewed from either the Recordings or Search screen options. Select Recordings from the Tab Bar to open the Recordings screen. Here you will see a list of your current recordings. Scroll through the list, highlight the program you want to watch, and press the Play/Pause button to start watching the program. From any of your Search Options, you can see a list of recordings for a specific program by highlighting and pressing on the Search Button. This screen will show a list of current or future scheduled broadcasts of this program in the top row. Scroll down to the second row to highlight the list of recorded programs. If the highlighted program has been completely recorded, press the Play/Pause button on your remote to play the recording.

 
Managing Your Recordings



To watch or delete current recordings, go to the Tab Bar and select the Recordings option. This screen will display the list of your recorded programs. Scroll up or down and press on the highlighted program that you want to manage. Scroll up or down to highlight a program and press the play/pause button to watch the program. The Checked Red circle to the left of the program indicates that it has not

been watched while programs with a Red Play circle have been partially watched. Press play/pause on a partially watched program to view the program where you last left off. From this list you can either watch or delete your recorded programs by highlighting the Watch or Delete options. If you choose to Delete a program, you will receive a prompt asking to confirm your deletion.

Future Recordings

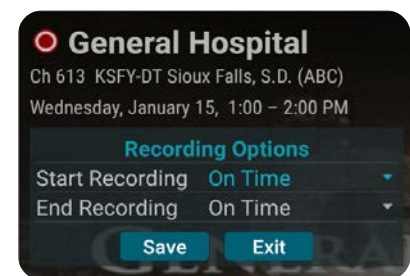


Use the Future Recordings feature to manage settings for your future recordings. From the Recordings screen, press the center of your remote control twice, and from the dropdown, choose Future Recordings to see a list of programs you have scheduled for recording. Scroll through the list, highlight and press the center of your remote to open a Future Recording that you want to manage. To assure that you don't miss the beginning or ending of a program, highlight Edit and press the center of your remote to edit the Start and End Recording times for the program. Scroll up or down and press the center of your remote to adjust the time when you want your recordings to start or end. Once you have finished your changes, highlight Save and press the center of your remote to save the changes. To delete a Future Recording, highlight Delete and press the center of your remote, to receive a prompt asking to confirm your deletion.

Series Rules

Use the Series Rules feature to manage the episodes of a series that you want recorded automatically. From the Recordings screen, press the center of your remote twice, and from the dropdown, choose Series Rules to see a list of series programs you have scheduled for recording. Scroll through the list and highlight a series you want to manage. Highlight Edit and press the center of your remote to open a Recording Options screen. Recording type lets you keep All Episodes or Only New Episodes. To Start and Stop recording times option works the same way as it does in Future Recordings. Once you have finished your changes, highlight Save and press the center of your remote. You can also delete all of the series Rules, but will only delete the Rules and not delete the Series Recordings.

 Restart TV

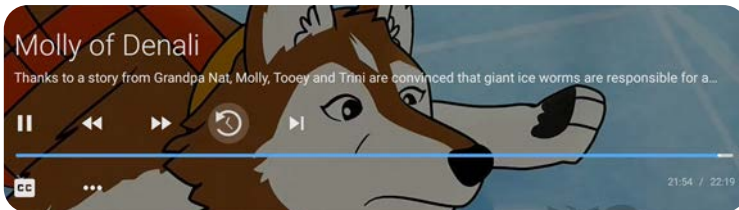

This popular feature lets you go back to the beginning of any currently-airing or in-progress recorded program that has the Restart Option. While watching Live TV, press on the upper part of the remote ring to open a program Play bar. Press on the upper part of the remote ring a

 
second time and scroll right to highlight the Restart Button. Press the center of your remote to restart the program from the beginning.

 Programs that have the Restart Option display a Green Restart icon in the program description.

Pause Live TV

Life happens and there may be times when you need to take care of something while watching your favorite program. While watching live TV, press on the play/pause button on your remote once to pause the program. After you have let the dog out, raided the refrigerator, or completed any other task, just press the Play/Pause button one more time to continue watching your program.

Quick Guide

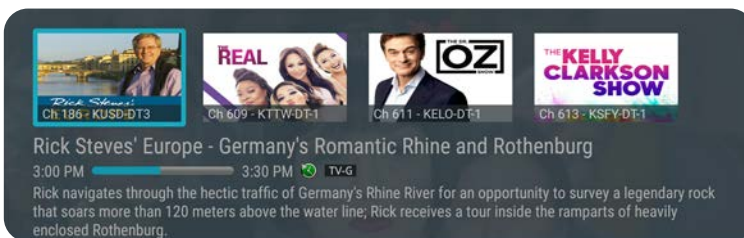

During a recorded or live program, press the lower left section of the remote control ring to pull down a menu list of your most recently-watched channels. Scroll left or right to choose a new channel and press the center of your remote to watch it.

On-Screen Guide Management



 
From your Home Screen, use the remote to highlight and expand the LightSpeed icon and press the center of the remote. This action will open your on-screen Program Guide. Press up, down, left or right to scroll through your channel lineup. Pressing the center of your remote on a highlighted program will open a program screen with detailed information about the program. This screen will also display the Watch, Record and Search Options. To Watch, use your remote to highlight the Watch button and press the center

of your remote. Choose the Search feature if you want to see future dates and times that this program will air or programs that have been recorded or scheduled for recording.

Recording Programs From the Guide

Select an upcoming program, press the center of your remote, highlight the record button and press the center of your remote to make a recording of this program.

Tab Bar

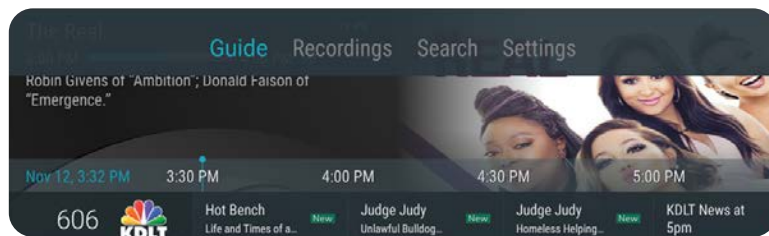

From the Program Guide, press the Back button on your remote to open the Tab Bar. The Tab Bar allows you to scroll Left or Right to access the Guide, Recording, Search, and Settings options.

Adding New Devices to Your Service

Before you add a new device to this service, go to the Settings in your Tab Bar from an activated device, scroll down and highlight Add Device. Press the center on your remote to generate a Login and Password for the new device. Follow the directions at the beginning of this guide for adding this service to your new Amazon Device.

Using Voice Search

In order for the voice search to work properly in the LightSpeed app, make sure that you bring up the typing pad before you start voice searching. If you do not bring up the typing pad first, you will be searching the FireStick instead of within the LightSpeed app.