

- Adding LightSpeed to your device
- Navigating Apps, Lists
- Channel Surfing
- Frequently Watched
- Video-On-Demand
- Navigation Guide
- Recording your Programs
- Watching / Deleting Recordings
- Upcoming Recordings
- Setting Rules
- Restart TV
- Fast Forward / Rewind Feature
- Pause LIVE TV



## APPLE TV USAGE GUIDE

Use this guide for detailed information on using our Streaming TV service with Apple TV platforms.

 
## Adding LightSpeed to your Apple TV streaming device



To add the LightSpeed app to your Apple TV, press the TV/Control Center button and use your Clickpod to open the App Store. Select the Search option on the top-level menu and use the on-screen keyboard to type in "LightSpeed".

Select and click the Install button to begin that installation.


## Navigating Apps, Content and Lists

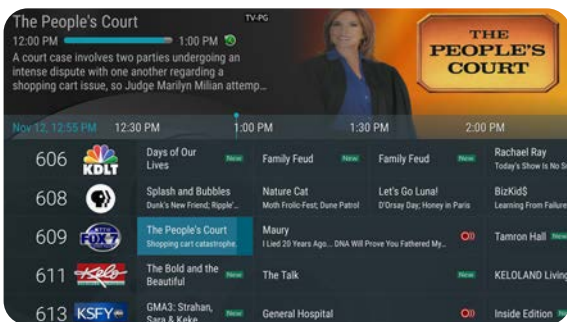

You can use the Clickpod to press up/down/left/right or swipe, to navigate through your LightSpeed TV Screens. To return to the previous screen press the "Back" button.

To return to the Apple TV "Home Screen" press the TV / Control Center.

## Channel Surfing / Channel Numbers

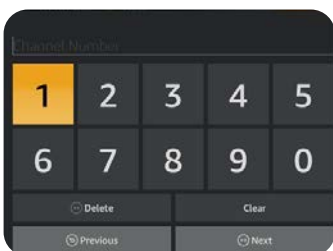 

Navigate up or down on the Clickpod to highlight a channel that you want to watch, then press the Play/Pause button to watch the program. If you want to quickly move to a higher or lower numbered channel in the guide, from a currently airing program, press up on the Clickpod go to a higher number channel, and press down on the Clickpod to move to a lower numbered channel.


## Frequently Watched Programs

When watching a live program, if you would like to view one of your frequently watched channels without going back to the guide, swipe "Down" on the Clickpod to see a list of your favorite channels. Click or swipe Left or Right on your Clickpod to highlight the new channel that you would like to watch, and press the "Play/Pause" button or the center of the Clickpod to switch to this channel.

## Video on Demand

When you select the "Video on Demand" option from the Tab Bar there will be a variety of Movies and TV shows that you will be able to watch when you want to. Use your Clickpod to make your selection and keep checking back for new releases and TV shows that will become available.

## Guide Management / Navigation

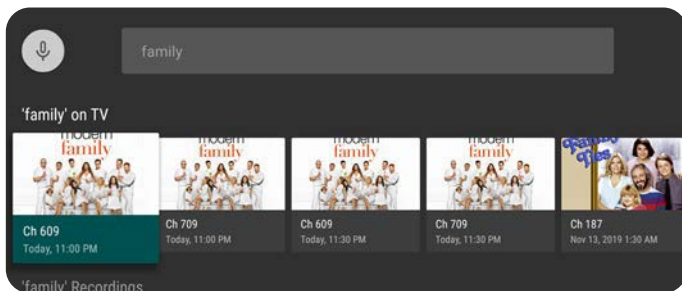


You can use the Clickpod on any program highlighted in blue for additional options. Press "Watch" to view a current airing program. Highlight "Record" to set a recording for this program. Highlighting and select "Search" allows the user to see other times when the program is available to watch or to set a recording.

## Recording Your Programs

 Select a currently-airing or upcoming program and then highlight and select "Record" to create a recording for this program. When you select "Record", a screen will display that gives you options for setting a recording series, or a one-time recording of the program. To further manage this recording, go to the taskbar and select the recording options.

## Watching / Deleting Recordings

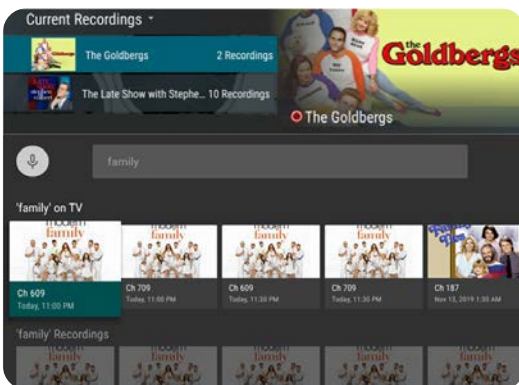

Recordings can be viewed from either the "Recordings" or "Search" screen options. Select "Recordings" from the Tab Bar to open the Recordings screen. Highlight and select "Current" to open your recorded program list.

Scroll through the list, select the program you want to watch and press the "Play/Pause" button on the remote to start watching the program. You can also delete the program by navigating to the Right and highlighting and selecting "Delete". You will receive a prompt asking you to confirm the deletion.

## Upcoming Recordings




Use the "Upcoming" feature to manage settings for your future recordings. From the "Recordings" screen, highlight "Upcoming" and open the list of upcoming recordings. Scroll through the list to highlight and select a program you want to manage. Select "Edit" to open an "Edit Recording Window". During editing, you can select how early or late you want a program to begin. Once you have finished editing your changes, highlight and select "Save".

## Setting Rules


Use the "Rules" feature to manage the episodes of a series that you want recorded automatically. From the "Recordings" screen, highlight and select "Rules" to open your list of series recordings. Scroll through the list; highlight and select the program series that you want to edit. At this point an "Edit Rule" screen will open. Highlight and select "Keep at Most" to choose a maximum number of episodes you want to keep of this series, or you can choose to keep ALL Episodes. "Show Type" allows the user to keep "Only New" or "All" episodes of a series.

## Restart TV

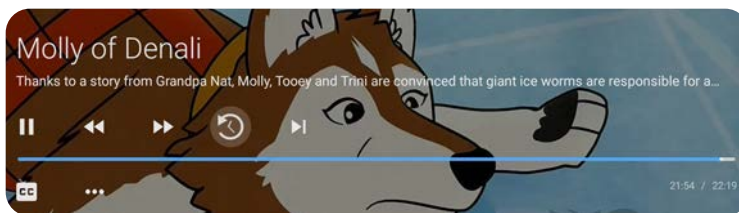


This popular feature lets you go back to the beginning of any currently-airing or in-progress recorded program that has the Restart Option. While watching Live TV, press on the upper part of the remote ring to open a program Play bar. Press on the upper part of the remote ring a

second time and scroll right to highlight the Restart Button. Press the center of your remote to restart the program from the beginning.

 Programs that have the Restart Option display a Green Restart icon in the program description.

## Fast Forward and Rewind Features

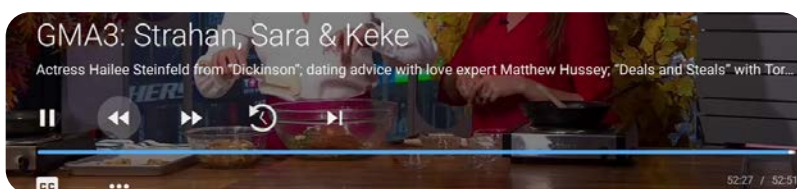

There may be times when you want to go back and see that exciting play in the game or fast forward through commercials - don't tell the advertisers. To use this feature during an in-progress or recorded program, press the

Fast Forward button on your remote control to advance the program, and press rewind to go back. The Progress Bar lets you track your movement through a program, and the timer helps you see how far you are from the end of the program.

## Pause Live TV

Life happens and there may be times when you need to take care of something while watching your favorite program. While watching live TV, press on the play/pause button on your remote once to pause the program. After you have let the dog out, raided the refrigerator, or completed any other task, just press the Play/Pause button one more time to continue watching your program.